


WarmMark QR - Recipient Guidance

WarmMark is a single-use time temperature sensor that is designed to ship with sensitive medications. WarmMark goes from white to red when exposed to higher than acceptable temperatures, signaling to recipients that the shipment was too warm, and that the medication should not be used. Shippers using WarmMark care about the quality, safety, and efficacy of medications delivered to patients and as such put in the appropriate measures to maintain critical shipping requirements.

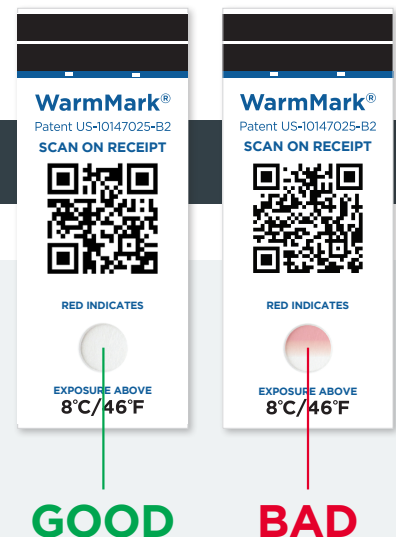

Scan the WarmMark in your shipment immediately upon receipt.



1. Scan the QR code on the WarmMark

Image Captured

4. Once box is yellow, hold for 1 second to auto capture the image.



2. Click "Continue" button on bottom of screen to open your camera.

Save Scan

5. Click "Save Scan" to check sensor condition.



3. Place the WarmMark inside the black box and adjust until the box turns yellow.




6. The condition of the WarmMark will be analyzed and temperature status will display on the final screen.

Initial QR Scan





Serial Number & Scan Instructions

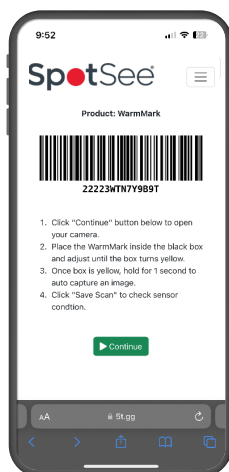

Vision System Check



Condition Information

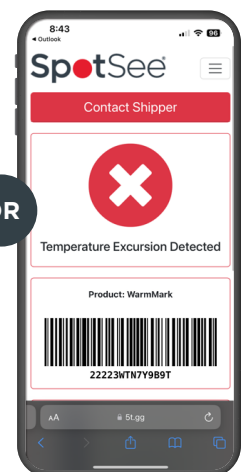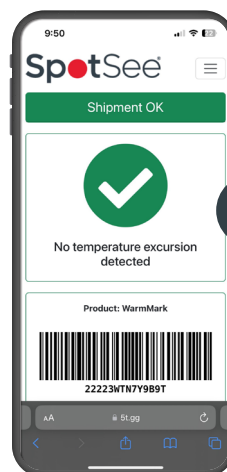

OR